 


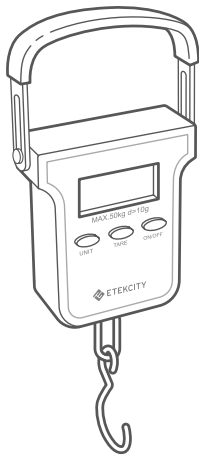

Digital Hanging Scale

Model No.: EHS-18

User Manual



Thank you for purchasing the Digital Hanging Scale by Etekcitey.

If you have any questions or concerns,
please reach out to our helpful Customer
Support Team at **support@etekcity.com**.
We hope you enjoy your new scale!

Table of Contents

Package Contents	3
Specifications	3
Safety Information	4
Function Diagram	5
LCD Display	6
Setup	7
• Battery Installation	7
Operation	8
• Weight Measurement	8
• Unit Conversion	8
• Data Hold Function	9
• Tare Function	9
Care & Maintenance	10
• Replacing Batteries	10
Warranty Information	12
Customer Support	14

Package Contents

- 1 x Digital Hanging Scale
- 2 x 3V CR2032 Batteries (Pre-Installed)
- 1 x Carrying Pouch
- 1 x User Manual

Specifications

Dimensions	8.3 x 3.4 x 1.1 in / 210 x 86 x 29 mm
Weight Capacity	110 lb / 50 kg
Units	oz / g / lb / kg
Auto-Off	60 seconds
Power	2 x 3V CR2032 Batteries

Weight of Object	Accuracy
< 44 lb (20 kg)	+/- 0.4 lb (0.2 kg)
> 44 lb (20 kg)	+/- 0.8 lb (0.4 kg)

READ AND SAVE THESE INSTRUCTIONS

Safety Information

 
Follow all instructions and safety guidelines. Read all instructions before using.

- **Do not** exceed the weight capacity of 110 lb (50 kg). An overload indicator will appear on the digital display if the limit is exceeded.
- This scale is not intended for commercial or heavy-duty use. Household use only.
- Do not throw or strike the scale and do not submerge the scale in water.

SAVE THESE INSTRUCTIONS

Function Diagram

- A. Handle
- B. LCD Display
- C. ON/OFF Button
- D. TARE Button
- E. UNIT Button
- F. Hook
- G. Battery Compartment
- H. Hook Storage

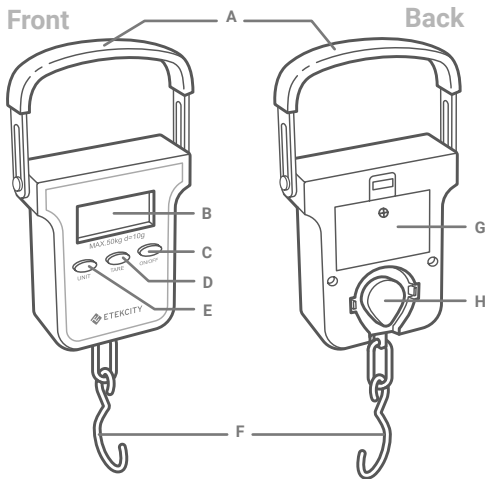

LCD Display

- A. Measured weight is less than the calibrated tare weight
- B. Displayed weight is the tared weight
- C. Last measured weight
- D. Weight in grams
- E. Weight in ounces
- F. Weight in kilograms
- G. Weight in pounds
- H. Maximum weight capacity has been exceeded (remove object from hook immediately)
- I. Battery low

H



I



A

B

C



D

E

F

G

Setup

Battery Installation

1. Use a screwdriver to loosen the screw.
2. Open the battery cover.
3. Remove the insulation strip to activate the batteries. **[Figure 1.1]**
4. When replacing the batteries, make sure to insert them under the proper polarity.

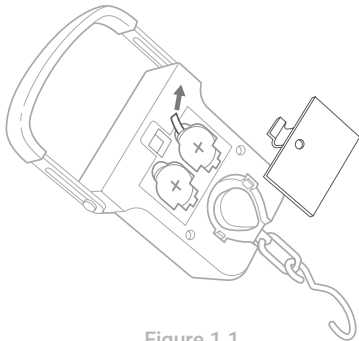 


Figure 1.1

Operation

Weight Measurement

1. Press **ON/OFF** and the screen will light up. Wait for "000" to appear on the screen.
[Figure 2.1]
2. Hang the object you want to measure on the hook.
3. Lift the scale with the object and hold still until the weight measurement stabilizes. The display will show the weight and "Hold".
4. To measure another item, remove the object and repeat steps 2 and 3.
5. Press **ON/OFF** to turn the scale off. The scale will automatically turn off if the scale is inactive for 60 seconds.

Note: To avoid result inaccuracy, keep the scale upright when measuring. **Do not** touch or move the scale during measurement. **Always** grasp the scale by the handle.



Figure 2.1

Unit Conversion

Press **UNIT** repeatedly to change the unit of measurement (oz / g / lb / kg).

Data Hold Function

Once the weight has stabilized and "**Hold**" appears on screen, the weight will stay on the screen for 60 seconds, or until you measure another object or press **TARE**.

Turning the data hold function on or off:

1. When the scale is on, press and hold **TARE** for 3 seconds.
2. Press **UNIT** to alternate between turning data hold function on or off.
 - Hoon** - Data hold function on
 - HooF** - Data hold function off
3. Press **TARE** to confirm selection.

Tare Function

The tare function allows users to weigh an object inside a container by subtracting the weight of the container from the total weight.

1. Hang the container on the weighing scale hook and allow the weight to stabilize and lock (the word "**Hold**" will appear).
2. Hold the scale stable and press **TARE** to tare the current weight. The display will show "000".
3. Place the object you want to weigh inside the container and the scale will calculate the weight of the object without the weight of the container.

Care & Maintenance

- **Do not** use chemical detergents to clean the scale. Use a soft, damp cloth if needed.
- If not in use for a long period of time, remove the batteries and store the scale in a cool, dry environment to avoid circuit damage.

Replacing Batteries

1. Locate the battery compartment on the back of the scale and remove the battery compartment cover.
2. Ensure the **+** side of the battery is facing up and insert the batteries into the battery slots. [Figure 3.1]
3. Replace cover.
4. Use a screwdriver to tighten the screw.

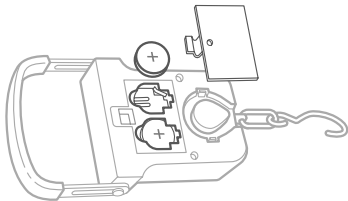 


Figure 3.1

This product contains a coin/Button battery

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

- Place sticky tape around both sides of the battery and dispose of it immediately in an outside bin or recycle safely
- Store spare batteries securely
- recycling units emptied on a regular basis
- use of opaque containers – to keep the batteries out of view;

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;

- be tired or lethargic;
 - be quieter or more clingy than usual or otherwise "not themselves";
 - lose their appetite or have a reduced appetite;
 - not want to eat solid food / be unable to eat solid food.
- These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.



Warranty Information

Product	Digital Hanging Scale
Model	EHS-18
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

Terms & Policy

Etekcify Corporation ("Etekcify") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcify agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange

without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

This warranty does not apply to the following:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcify;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Etekcitec will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcitec's warranty extends only to products purchased from authorized sellers that are subject to Etekcitec's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages,

so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@etekcity.com**. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcitec product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.etekcity.com/warranty.

This warranty is made by:

Etekcitec Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your order invoice and order ID ready before contacting Customer Support.*

Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used

in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

ETEK CITY Corporation hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B.

The declaration of conformity may be consulted in the support section of our Web site, accessible from www.etekcity.com.



A6-01.04_D_23C22_us